



SPICE CABINET GROUND CONNECTION DIAGRAM
TYPICAL FOR STEP 3 & 5
NOT TO SCALE

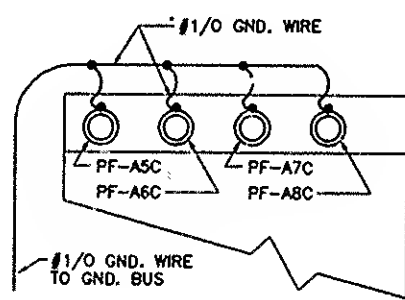

SECTION a-a


STEPS REQUIRED FOR 15KV FEEDER INSTALLATION

1. - DE-ENERGIZE FEEDER.
2. - REMOVE EXIST. ARCPROOFING.
3. - BREAK EXIST. SPLICES (3) AND DISCONNECT GND. WIRE AS REQ'D.
4. - REMOVE EXIST. CONDUIT & WIRE TO 1500KVA TRANSF. SWITCH.
5. - INSTALL CONDUIT & WIRE TO 2000KVA TRANSF. BKR. HV-B.
6. - RE-MAKE SPLICES (3) AND CONNECT GND WIRING AS SHOWN. (REMOVE BARRIER IF REQ'D.)
7. - MAKE CONNECTIONS AT 2000KVA TRANSF. BKR. HV-B.
8. - INSTALL ARCPROOFING.
9. - TEST FEEDER AND RE-ENERGIZE.

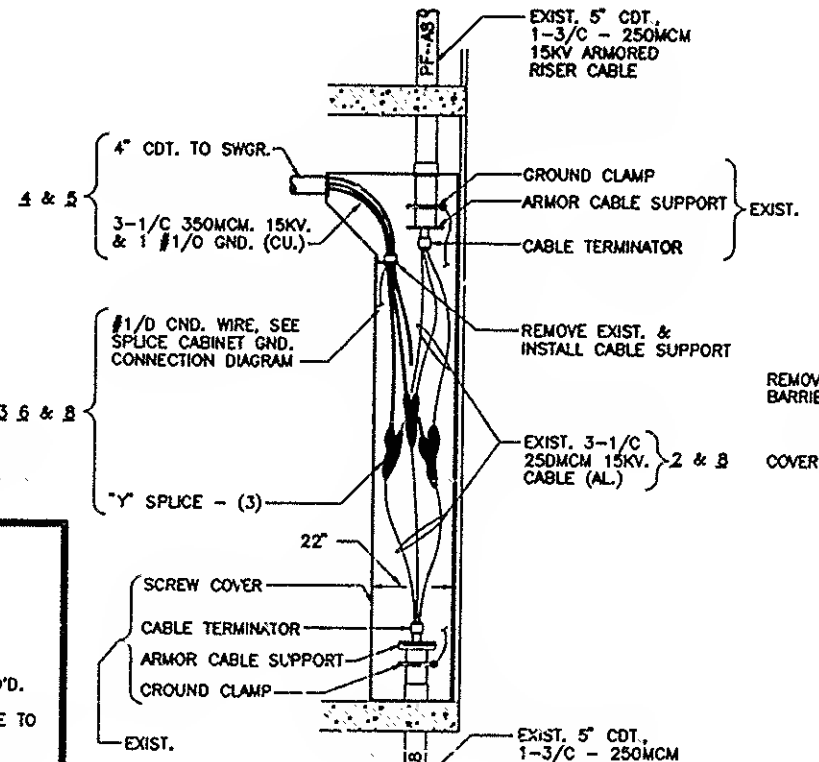

SECTION A-A
NOTE: PF-A5, A6, & A7 ARE TYPICAL

DETAIL "A"
15KV. SPICE CABINET
SCALE IN FEET
0 1 2 3 4 5

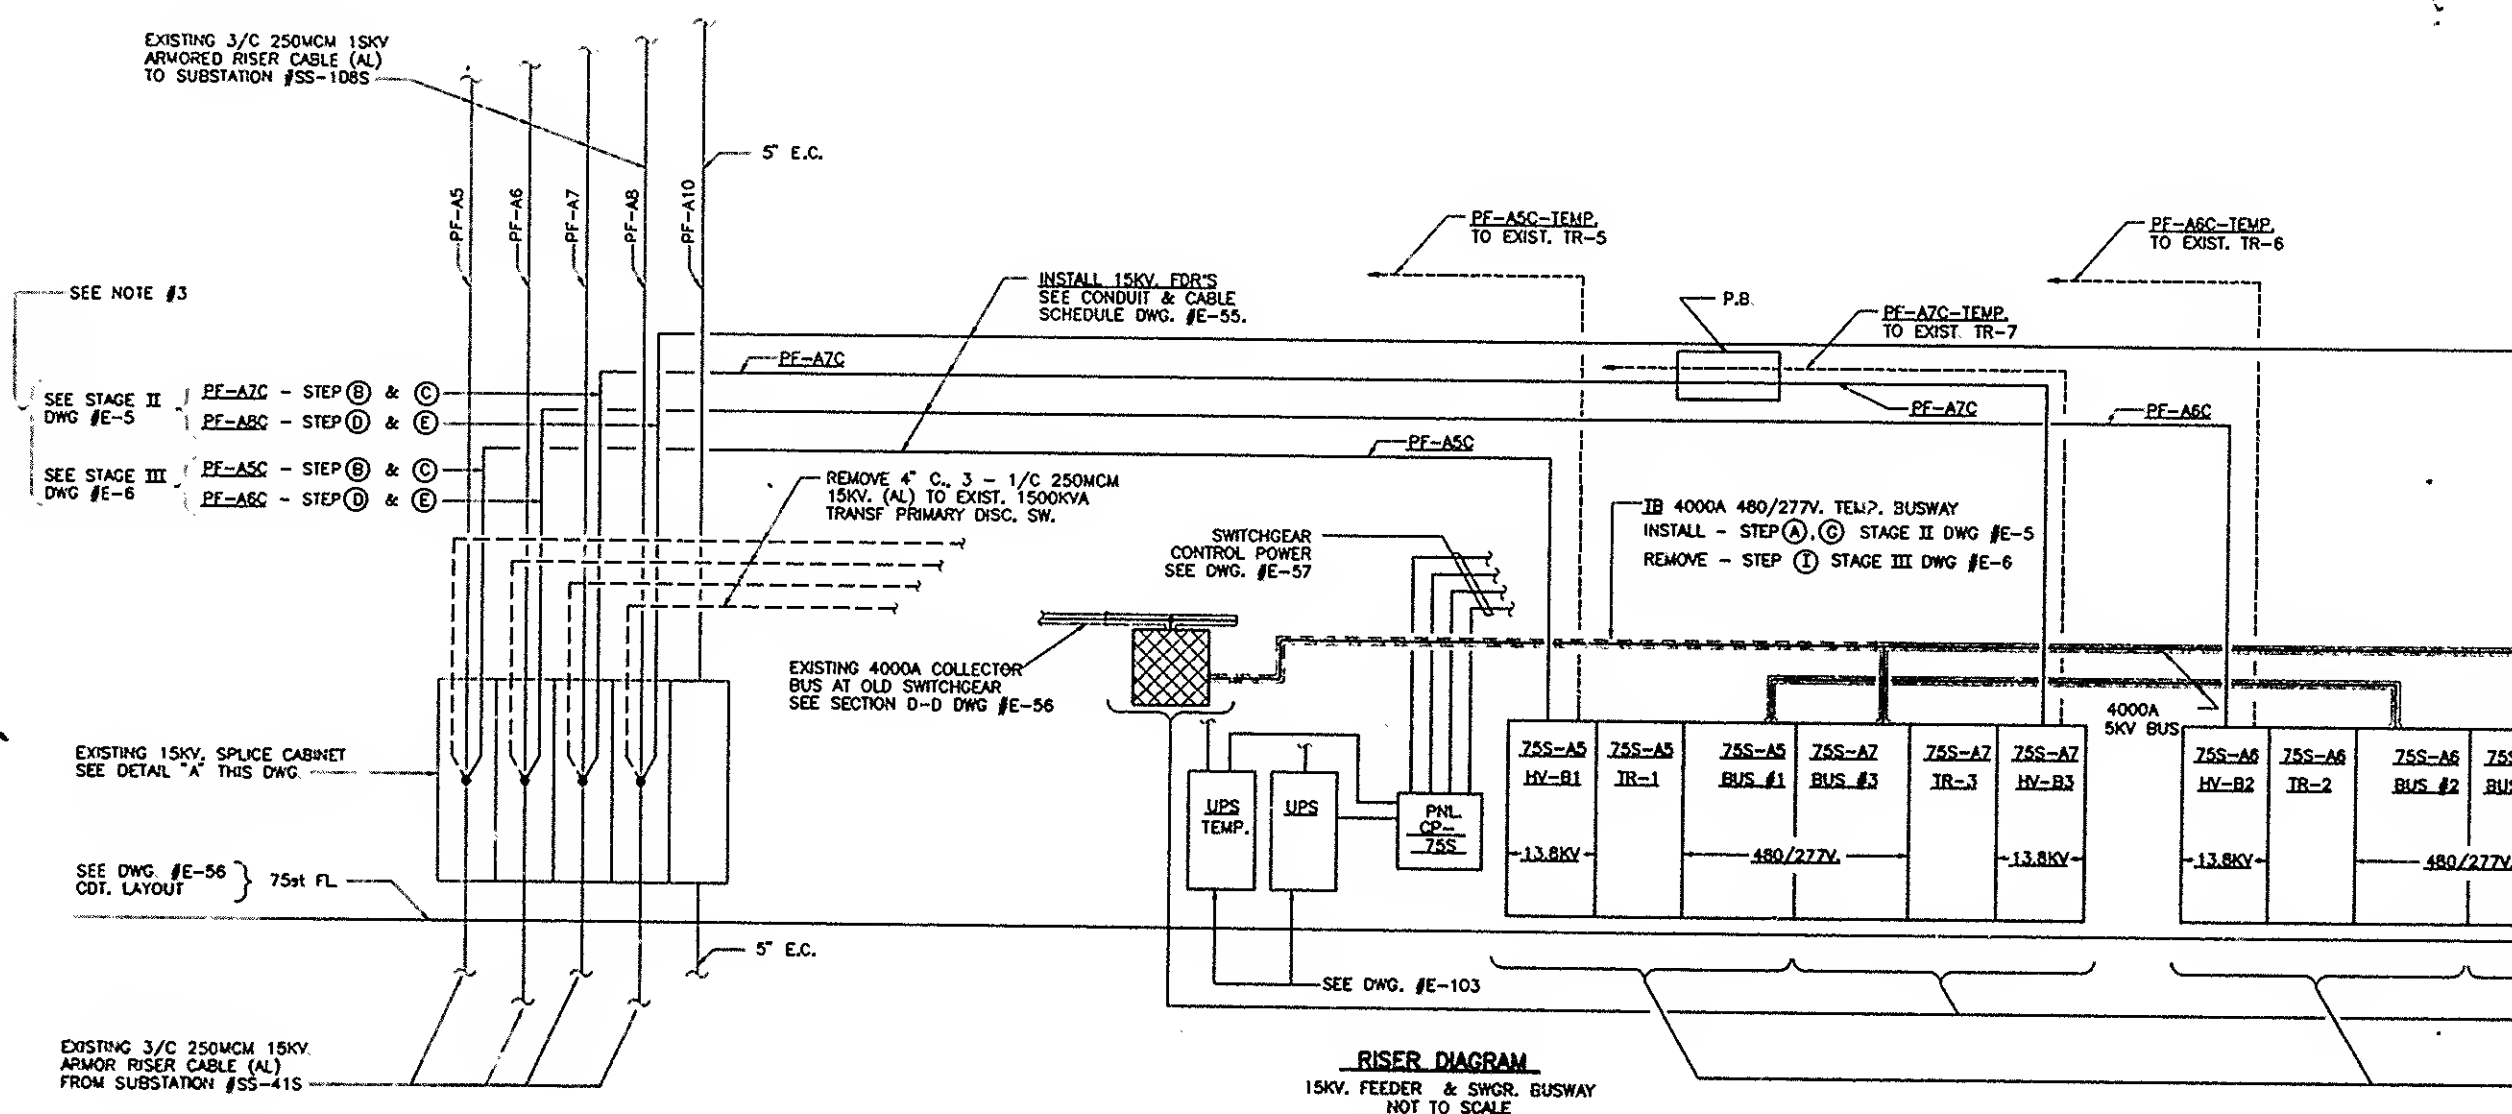

RISER DIAGRAM
15KV. FEEDER & SWGR. BUSWAY
NOT TO SCALE